

XOMOX®

PNEUMATIC PART TURN VALVE ACTUATORS

SERIES XRP & XRP UPGRADE
SINGLE ACTING &
DOUBLE ACTING

INSTALLATION, OPERATION AND MAINTENANCE MANUAL

CRANE

v in

www.cranecpe.com

Content

1. Area of Application.....	3		
2. Intended Use	3		
3. Declaration of Manufacturer	4		
3.1 Declaration of Incorporation for partly completed machines in the sense of the Machinery Directive 2006/42/EC, Annex II, sub 1B.....	4	6.1.3 Installation into the Pipeline	9
3.2 Declaration of Conformity acc. to the Directive 2014/34/EU (ATEX).....	5	6.2 Connecting the Solenoid Valve.....	9
3.3 Notes concerning Pressure Equipment Directive 2014/68/EU (PED).....	6	6.3 Connection of Position Indicator and/or Position Controller Module	11
3.4 Declaration of Manufacturer for Electric Accessories	6	6.4 Tests upon Completion of Installation	11
3.5 Torques According to DIN 3337 / EN5211.....	6	7. Start-up	11
4. Notes on Safety	7	8. Troubleshooting	12
4.1 Important Information for the User	7	9. Work on the Pneumatic Actuator	12
4.2 General Safety Regulations.....	7	9.1 Mounting an Actuator to the Valve.....	12
4.3 Particular Types of Danger	7	9.2 Conversion of Drive Shaft to Change the Position Indicator	13
5. Transport and Storage	8	9.3 Changing the Spring Force.....	13
6. Installation and Connection to the Control System.....	8	9.4 Dismantling an Actuator.....	16
6.1 Installation of a Valve with Pneumatic Actuator into the Pipeline	8	9.5 Setting the End position.....	17
6.1.1 Checking the Actuator Position before Installation	8	9.6 Schematic Structure	18
6.1.2 Checking the Position Indicator before Installation	8	9.7 Installation of the shaft inserts for drives 001, 002, and 006.....	20
		10. Maintenance	21
		11. Spare Parts	21
		12. Further Information	21
		13. Mini Drives	21
		14. Exploded View	22
		15. Screw Tightening Torques	23
		16. Waste disposal after expiry of the expected service life.....	23

Installation, Operation & Maintenance

1. Area of Application

These instructions are applicable to

XOMOX® pneumatic part turn actuator double-acting, series X

XOMOX® pneumatic part turn actuator with spring reset, series X

XOMOX® Upgraded pneumatic part turn actuators series XU, single and double acting

Note 1:

When assembling the actuator to a valve, the instructions for the valve must be followed.

Note 2:

For information that is already required during the planning phase, reference is made to Publications, which can be viewed on the Crane ChemPharma Homepage www.cranecpe.com or which are available from the manufacturer, in order to keep the arrangement of this instruction manual as clear as possible.

Note 3:

"This range of Pneumatic Actuators is also suitable for use with other operating media and therefore hereafter will be referred to as The Actuator".

2. Intended use

These XOMOX® actuators are intended

- For installation to a valve, attachment of a solenoid valve and connection of this solenoid valve to a control provided by the customer.
- To be operated with the control medium compressed air, inert gas, water or hydraulic oil, at max. 8 bar, except sizes 001, 002, 006 up to max. 7 bar. For Upgraded XRP Versions the max static pressure is 10 Bar & max dynamic pressure is 8 Bar.
- Before applying compressed air to the spring chamber of spring loaded actuator through port "B", you should consult the manufacture.
- That in normal operation a control pressure in compliance with the type plate is permanently applied to the pneumatic actuator and that this pressure is not exceeded.
- To actuate valves with 90° travel (e.g. butterfly valves and ball valves) by executing the commands of the above mentioned control (for special applications actuators are available with travel of 120°- or 180°).
- An actuator properly mounted on the valve shows the position of the valve by means of an optical indicator.
- An (optional) "position indicator" module mounted to the actuator is used to signalize the position of the valve to the control provided by the customer.

Double/acting actuators

Stop at the current position in case of a control pressure failure. With control pressure applied, but after a shut-down or failure of the control voltage on the solenoid valve, it solely depends on the control of this solenoid valve to which position the actuator will travel.

Unless otherwise specified by the customer, the actuator should close.

Spring resetting actuators with closing spring:

travel to safe position "CLOSED" in case of a control pressure failure / shut-down.

Spring resetting actuators with opening spring:

travel to safe position "OPEN" in case of a control pressure failure / shut-down.

Design and control of the solenoid valve must ensure the above mentioned functions of a spring reset actuator.

Notes on equipment for manual emergency actuation in case of control pressure failure:

Actuators

can only be operated with the help of an (optionally available) auxiliary drive.

The actuator is not intended to be used for purposes other than the ones specified hereunder. We would particularly like to point out that the actuator has not been approved for:

- A manual emergency actuation using the extension of the control shaft while control pressure is applied.
- Emergency operation of spring reset actuators using open-end spanner or similar tools.
- Operation of electrical modules with inadequate protection class (acc. to EN 60529), especially the installation and operation of actuators with electric accessories (solenoid valves, position indicators and/or position controllers) without approved explosion protection in compliance with EN 50014, EN50018, EN50019 or EN 50020 in potentially explosive environment.
- Use of control media other than those specified in these instructions without the consent of the manufacturer.
- For operation with control medium compressed air, inert gas, water or hydraulic oil of maximum 8 bar, sizes 001, 002, 006 at max. 7 bar. For Upgraded XRP Versions the max static pressure is 10 Bar & max dynamic pressure is 8 Bar. It is not allowed to use the actuator in chemically aggressive environments without the consent of the manufacturer.
- It is not allowed to operate the actuator at ambient temperatures above 80°C or below minus 20°C without the consent of the manufacturer.
- XOMOX® semi-rotary actuators are suitable for use in safety relevant applications (SIL Level, s. declaration of conformity). If attachments (such as valves, solenoid valves, positioners....) are installed, the complete unit must be examined with respect to the SIL Level for the entire unit.
- Sound pressure measurement acc. to DIN EN ISO 3744, at a distance of 1m, mean sound pressure level:
 - with silencer: 68 dB(A)
 - without silencer: 107 dB(A)
- The manufacturer will not assume warranty or liability when acting against the rules of intended use.
- All maintenance and repairwork should be done outside explosive area and atmosphere.

Declaration of Manufacturer

3. Declaration of Manufacturer

3.1 Declaration of Incorporation

Declaration of Incorporation

In accordance with directive 2006/42/EC appendix II, no.1 B for partly completed machines

The manufacturers: Xomox International GmbH & Co. OHG
Von-Behring-Str. 15, D-88131 Lindau, Bodensee, Germany

and

Crane Process Flow Technologies Ltd.
Satara – 415 004, India

declare that the pneumatic actuators manufactured in series production

Designation: XOMOX XRP & XRP Upgrade– Pneumatic Valve Actuator
Designs: Double-Acting and Single-Acting with spring accumulator
Series: X and XU
Sizes: 001-006, 012-180 (with and without overtravel and positioners), 205, 380, 630, 960, H15. Actuators sizes ranging from 012 to 180 are also available in XRP Upgrade (XU series).
Finish: double acting, with spring resetting, service unit, exhaust, silencer, bridges, coupling, quick ventilation valve, piping and hoses.

in the version delivered, by us are in compliance with the basic requirements as specified in appendix I of the above directive and have been applied and compiled with:

1. General principles no. 1
Specifically nos. 1.1, 1.3, 1.5, 1.7, 2.1, 3.4, 3.6, 4.1 and 4.2
2. operation must only take place under due consideration of the operating and installation instructions.
3. the units belong to the category of pressure equipment following the EU pressure equipment directive 2014/68/EU, acc. to chapter 1, article 1, section 2, abstract (j), issue (ii).

This incomplete machine must only be taken into service after it has been assured that the machine, into which this incomplete machine is to be incorporated, fully complies with the regulations of the machinery directive 2006/42/EC, whenever applicable.

The special technical documents were created in compliance with appendix VII, part B of the directive.

Applied technical specifications:

EC-Directive: Directive 2006/42/EC on Machinery and
Pressure equipment directive 2014/68/EU
Harmonized standards: EN ISO 12100
EN ISO 5211
VDI/ VDE 3844/3845
EN15714-3 (only for XU series)

Mr. Matthias Specker, XOMOX International GmbH & Co. OHG is authorized to compile technical documents.

Place / Date: Lindau, Germany, 30.04.2025

Signature of Manufacturer: 

Information on signatory: Mr. Sascha Uebelher-Spath,
VP Operations Central & Eastern Europe.

Declaration of Manufacturer

3.2 Declaration of Conformity



EU-Declaration of Conformity

In accordance with directive 2014/34/EU for equipment intended for use in potentially explosive atmospheres

The manufacturers: XOMOX International GmbH & Co. OHG
Von-Behring-Str. 15, D-88131 Lindau, Bodensee, Germany

and

Crane Process Flow Technologies Ltd.
Satara – 415 004, India

declare that the pneumatic actuators manufactured in series production

Designation: XOMOX XRP & XRP Upgrade– Pneumatic Valve Actuator

Designs: Double-Acting and Single-Acting with spring accumulator

Series: X and XU

Sizes: 001-006, 012-180 (with and without overtravel and positioners),
205, 380, 630, 960, H15.
Actuators sizes ranging from 012 to 180 are also available in XRP Upgrade (XU series).

Finish: double acting, with spring resetting, service unit, exhaust, silencer,
bridges, coupling, quick ventilation valve, piping and hoses.

in the version delivered by us are in compliance with the following applicable regulations:

EU-Directive: Directive 2014/34/EU for equipment intended to be used in
potentially explosive atmospheres.

Assessment method gas: Equipment group II, Category 2G, Explosion group IIC,
Temperature class T6...T4,
Equipment Protection Level (EPL) Gb

Assessment method dust: Equipment group II, Category 2D, Explosion group IIIC,
Temperature class T85°C...T135°C,
Equipment Protection Level (EPL) Db

Harmonized standards: EN 1127-1:2019-10
EN ISO 80079-36:2016 & EN ISO 80079-37:2016

Mr. Matthias Specker, Xomox International GmbH & Co. OHG is authorized to compile technical documents.

Place / Date: Lindau, Germany 30.04.2025

Signature of Manufacturer:

Information on signatory: Mr. Sascha Uebelher-Spaeth,
VP Operations Central & Eastern Europe

Installation, Operation & Maintenance

3.3 Notes concerning pressure equipment guideline

2014/68/EU (PED)

These actuators are dimensioned as positioning device in accordance with Chapter 1, Article 1, Section 2, Abstract (j), Issue (ii) of the pressure equipment guideline and are therefore not pressure equipment within the meaning of the EC pressure equipment guideline 2014/68/EU.

3.4

Declaration of Manufacturer for Electric Accessories

are – if applicable – enclosed with the delivered accessories.

3.5

Torques According to DIN 3337 / EN 521, as per the below table.

			Double Acting		Spring Return		Remarks
Size	Valve	Max.	Max. Allow.	Torque At		Spring Torque	
	Connection	"Allow. Torque Acc. Din"	"Air Supply Pressure Acc. Din"	"Max. Air Supply Pressure"	"Max** Number Of Springs"	"At Max. Number Of Springs"	
001	F03	32 Nm	7 bar	7,7 Nm	-/ -	-/ -	max. 4 springs
002	F03	32 Nm	7 bar	19 Nm	12 (4)	11,7 Nm	
006	F03	32 Nm	5 bar	31 Nm	12 (4)	27,2 Nm	
006	F04	63 Nm	7 bar	43 Nm	12 (4)	27,2 Nm	
006	F05	125 Nm	7 bar	43 Nm	12 (4)	27,2 Nm	
012*	F05	125 Nm	8 bar	99 Nm	14	57,1 Nm	
	F05	125 Nm	5 bar	120 Nm	14	112 Nm	
	025*	250 Nm	5,5 bar	244 Nm	14	207 Nm	
	050*	250 Nm	3 bar	253 Nm	8	224 Nm	
	090*	500 Nm	6 bar	506 Nm	14	392 Nm	
	130*	500 Nm	4 bar	513 Nm	12	506 Nm	
180*	F12	1000 Nm	7,5 bar	962 Nm	14	590 Nm	
	F12	1000 Nm	6 bar	1012 Nm	14	776 Nm	
205	F14	2000 Nm	8 bar	2022 Nm	14	1180 Nm	
380	F14	2000 Nm	5 bar	1847 Nm	14	1769 Nm	
380	F16	4000 Nm	8 bar	3035 Nm	14	1769 Nm	
630	F16	4000 Nm	6 bar	3792 Nm	14	2949 Nm	
960	F16	4000 Nm	4 bar	3839 Nm	18	3792 Nm	
960	F25	8000 Nm	8 bar	7677 Nm	18	3792 Nm	
H15	F25	8000 Nm	5,5 bar	8079 Nm	14	6852 Nm	
H15	F30	16000 Nm	8 bar	11752 Nm	14	6852 Nm	

*Actuators are also available in XRP Upgrade

** Under the assumption that spring torque is + / - equal air torque

Installation, Operation & Maintenance

4. Notes on Safety

4.1 Important Information for the User

The actuators described hereunder have been designed and manufactured in compliance with standards and regulations stipulated above. They therefore comply with the latest technical standards and meet the requirements of these standards.

However, safety during operation in practice can only be achieved if all necessary measures are applied. It is the responsibility of design engineer and operator of pipeline systems equipped with valve and actuator to plan appropriate measures and to monitor their implementation and execution.

In particular the operator must ensure that The actuator is only used as described in section 2 <Intended Use>,

- The control medium is compatible with the material of the actuator (anodised aluminium),
- The actuator is only operated in fault-free, fully functional condition and the function of the safety installations in control pressure generation and distribution system and in the electric control provided by the customer are checked at regular intervals,
- All guards and safety installations for electrically and mechanically moved parts of the actuator and its accessory modules are maintained in as-delivered condition and the safety covers of junction boxes are properly closed again after electrical connection,
- Only appropriately qualified and authorized personnel plans and connects the actuator, operates the control system and is regularly instructed about all relevant issues concerning local regulations for health and safety at work – also for electrical equipment,
- This personnel has the necessary equipment available to carry out the work steps described hereunder,
- For Single Acting Actuators, Port "B" has to be protected adequately to secure quality of entering medium.
- This personnel is familiar with these operating instructions and the instructions for the associated valve and observes the information contained therein,
- Repairs and conversions on spring reset actuators are only carried out under the supervision of a safety expert.
- If the information contained in these instructions is not observed, the liability of Crane Process Flow Technologies for the above mentioned products shall become null and void.

4.2 General Safety Regulations

The same safety regulations apply for actuators as well as the equipment for the generation and distribution of control pressure and for the electrical control system they are connected to. Compliance with these regulations is also assumed for operation of the actuator.

The following must be additionally observed, especially for these pneumatic/hydraulic actuators:

- Actuators are designed for control pressures of max. 8 bar, sizes 001, 002, 006 max. 7 bar, for Upgraded XRP Versions the max static pressure is 10 Bar & max dynamic pressure is 8 Bar whereby compressed air, neutral gas, water or hydraulic oil at room temperature may be used. In order to protect the solenoid valves, the control medium should be filtered with a mesh size of 40 µm (see ISO 8573-1, class 5). Compressed air must be dried and may be slightly oiled for special applications. Manual emergency actuation of actuators must only be performed using an additionally mounted manual emergency device (e.g. uncoupling worm gears). Do not actuate while control pressure is applied.
- Work on electric connections must only be carried out by appropriately trained specialists with responsibility for the control of the entire plant.
- If these actuators are not delivered by the manufacturer together with the valve, but are to be installed by the customer, the information in section 9.1 <Installation of an Actuator enclosed with the delivered accessories.
- The actuator does not heat up by itself during operation.

4.3 Particular Types of Danger

ATTENTION

Under normal conditions the actuator must only be operated with the safety installations in place. If these need to be removed for adjustment or connecting work, all connections to the control medium must be disconnected before hand.

ATTENTION

Electrical assemblies shall only be operated with safety covers closed and connections covered. If these need to be removed for adjustment/connecting work, connections for supply and control voltage must be disconnected beforehand. Adjustments to be made in live condition must be performed with properly insulated tools.

Installation, Operation & Maintenance

5. Transport and Storage

An actuator or an assembly is a high-quality product and as such must be handled, transported and stored with utmost care, in order to avoid damage to actuator and additional assemblies.

⚠ ATTENTION

If lifting tackle (ropes or similar) is used on the lifting eyelets (bores) of the actuator provided for this purpose, these must only be used to mount the actuator to the valve, but under no circumstances to transport the unit (valve + actuator).

- If the actuator or the unit valve/actuator is to be stored prior to installation, it must be sufficiently protected against harmful influences from dust, dirt and moisture.
- The actuator or the valve/actuator unit shall be stored in its original packaging material (on a pallet or similar).
- The unit valve/actuator shall not be permanently exposed to full sunlight – even if properly packed.
- The actuator or the unit valve/actuator must not be actuated.

If the packaging does not show any transport damage the actuators or the unit valve/actuator should only be unpacked just before installation. Unpacked parts must be properly protected against any dirt, moisture and corrosion.

6. Installation and Connection to the Control System

For the most part actuators are delivered ready for installation together with the necessary electrical assemblies (solenoid valve, position indicator and/ or position control). Should this not be the case, the actuators must be mounted to the valve and/ or electrical assemblies to the actuator by the customer, before the valve is installed in the pipeline. The instructions in section 9.1 <Installation of an Actuator...> must be strictly followed.

When installing a solenoid valve the following section 6.2 must be observed.

⚠ ATTENTION

When starting installation work one must make sure that the system data for control pressure, control voltage and frequency for all assemblies are in compliance with the technical data specified on the type plate of the actuator and/or the module.

Consumption of control medium and recommended supply line cross-sections are listed in table 1. The shortest possible closing speed mentioned in this table is a reference value for standard double-acting actuators without mounted valve and with optimal supply and discharge of control medium. Friction inside the valve will considerably extend this limit value.

As far as the following description refers to pneumatic control systems, the instructions analogically also apply for

hydraulic systems with a pressure of up to 8 bar, sizes 001, 002, 006 up to 7 bar (e.g. water). For Upgraded XRP Versions the max static pressure is 10 Bar & max dynamic pressure is 8 Bar.

6.1 Installation of a Valve with Pneumatic Actuator into the Pipeline.

⚠ ATTENTION

When connecting electric/pneumatic supplies to the accessory modules. For controlling the valves, the special instructions for these electrical accessory modules must be strictly observed.

The actuator is normally delivered together with the valve and is in this case adjusted to the end positions of the valve. Position indicated included in the delivery are normally also adjusted to the end positions, a solenoid valve in the scope of delivery is normally mounted to the actuator. If the electrical modules solenoid valve and/or position indicator and/or position controller are delivered as separate items, this (these) module(s) must first be mounted to the actuator, before the complete unit is installed into the pipeline, see section 6.2.

The interfaces for the installation of the modules solenoid valve and/or position indicator and/or position controller are standardised acc. to VDI / VDE 3845.

⚠ ATTENTION

On an actuator of standard design the supply of control medium through port "A" causes an anti-clockwise and the supply through port "B" a clockwise actuation. Spring reset actuators must only be supplied with control medium through port "A". See Fig. 1.

If, for example, the actuator is separately delivered as a spare part, the instructions in sections 9.1, 9.3 and Caution!

Table 1: Important actuator data

Size	001	002	006	012	025	050	090
Volume/travel [L]	0,06	0,12	0,28	0,53	1,02	1,9	3,6
Compressed air line **) (length up to 6m)	6 mm	6 mm	6 mm	6 mm	6 mm	8 mm	8 mm
Min. closing time [s] *)	approx. 0,25	approx. 0,35	approx. 0,4	approx. 0,5	approx. 0,7	approx. 0,9	approx. 1,1

Size	130	180	205	380	630	960	H15
Volume/travel [L]	5,49	7,21	9,0	13,0	22,0	32,5	52,0
Compressed air line (length up to 6m)	8 mm	8 mm	15 mm	15 mm	15 mm	15 mm	15 mm
Min. closing time [s] *)	approx. 1,3	approx. 1,4	approx. 1,6	approx. 2	approx. 2,5	approx. 2,8	approx. 3,5

*) These data are limit or reference values for double-acting drives with 6 bar control pressure and apply only for the actuator (no valve attached). Shorter closing times on request.

**) Refer Table on page no. 10, for more details.

Installation, Operation & Maintenance

XOMOX® Actuator Series X & XU

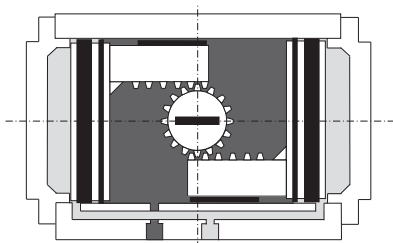


Fig. no 1 A B

9.4 must be observed. In this case it is recommended to mount the actuator to the valve prior to the first installation of the valve into the pipeline and to the unit according to 6.1.1

Installation of valve with actuator should be performed in the following sequence:

6.1.1 Checking the Actuator Position before Installation

If not specified differently in the purchase order, the actuator is delivered in a space-saving position parallel to the pipeline.

If it needs to be installed 90° offset:

Convert the actuator as described in section 9.2 „Conversion of the actuator shaft“ in the detailed instructions.

6.1.2 Checking the Position Indicator before Installation

• If delivered without electrical position indicator:

- Slot diagonal to pipeline axis: Valve is closed,
- Slot parallel to pipeline axis: Valve is open. If the positions of valve and indicator do not match, see section 9.2 .

• If delivered with electrical position indicator:

The optical indicator “OPEN” and “CLOSED” in the module must be compared with the position of the valve. If the positions of valve and indicator do not match: Plug the indicator in the accessory module position indicator (electric pneumatic) into a different socket.



ATTENTION

An incorrect position indication is a potential risk for later operation. Valves/ actuators with incorrect position indication must not be installed and should be rejected.

6.1.3 Installation into the Pipeline

Installation of the unit valve/actuator into the pipeline is described in the operating instructions for the valve, these instructions must be treated with priority.

The following is additionally valid:



ATTENTION

Actuators must be appropriately supported in order to relieve the valve housing from excessive loads. They must be supported if their size and/ or installation orientation applies any bending strain to the valve.



ATTENTION

Actuators of any size must not be subjected to any external loads, since this may damage or even destroy the valve. Actuators are not "stepladders".

6.2 Connecting the Solenoid Valve

The actuator is controlled by a solenoid valve.

The solenoid valve is normally connected to the actuator via the standardized interface on the side of the actuator. The connection to the control must

- Meet the prerequisites specified in section 2 "Intended Use",
- Be in compliance with the documentation of the solenoid valve included in the delivery.



ATTENTION

This must be observed particularly if the solenoid valve has not been delivered together with the actuator.

- Be in compliance with the following schematics in Fig. 2 to 5

Installation, Operation & Maintenance

Air connections double-acting

Air supply to port A: anti-clockwise/open

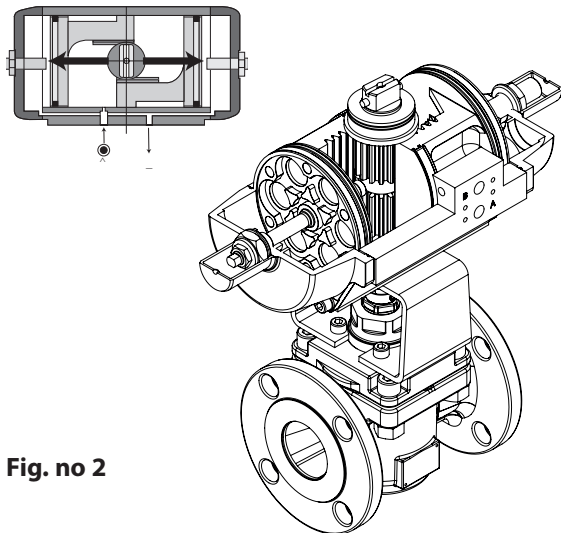


Fig. no 2

Air connections with spring reset

Air supply to port A: anti-clockwise/open

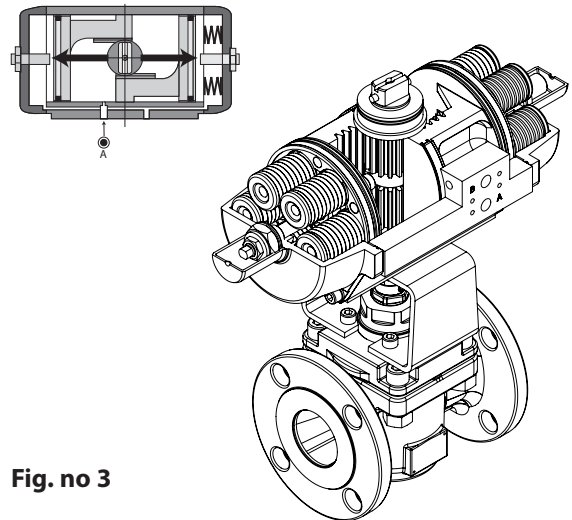


Fig. no 3

Air supply to port B: clockwise/closed

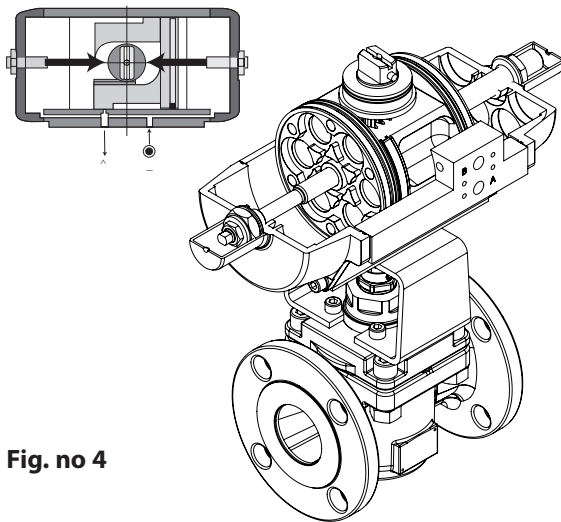


Fig. no 4

Spring reset: clockwise/closed

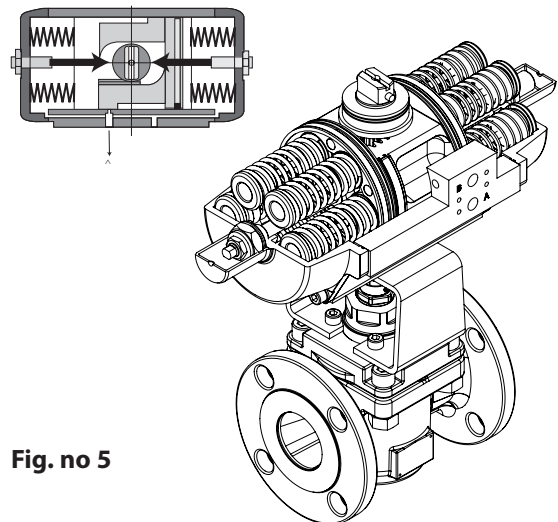


Fig. no 5

Recommended Pipe Diameters for Compressed Air Lines

Actuator Size	Up To 1.20 M	Longer Than 1.20 M, Max. Upto 6 M
001 - 025	6 mm	6 mm
050 - 180	8 mm	8 mm
205 - H15	10 mm	15 mm

Installation, Operation & Maintenance

6.3 Connecting the Position Indicator and/or Position Controller Module (if present)

This type of module may already be installed (or can be mounted) to the interface on top of the actuator, instead of the optical position indicator. It has the purpose to signalize the position of the valve to the customer supplied control and signalizes the end positions "OPEN" and "CLOSED" and/or intermediate positions (on valves used for throttling/regulation).

Electric and pneumatic connections must be made in compliance with the documentation for position indicator and/or position controller.

6.4 Tests upon Completion of Installation

Once the installation of a valve/actuator unit is completed, it is highly recommended to perform the following test steps on each valve:

IS THE "LOCAL" CONTROL PRESSURE SUFFICIENT?

At least the control pressure determined by the design of the actuator must be available directly on the solenoid valve.

IS THE SOLENOID VALVE CORRECTLY CONNECTED?

With control pressure applied, but failure of the control signal (to check: pull out plug), the valve must travel to the following position:

Double-acting actuator: The valve closes or opens, see section 2, Intended Use, note 1

Actuator, spring closing: The valve must travel to safety position "CLOSED".

Actuator, spring opening: The valve must travel to safety position "OPEN".

If this fails check control system and/or solenoid valve.

Check actuating function and indication: With control pressure applied the control commands "OPEN" and "CLOSE" must move the valve to the corresponding end positions. The optical indicator on the actuator must show this correctly. If this fails check the actuator control.

Connection actuator/valve properly tightened? During the function test no relative movements should occur between valve, mounting bridge (if applicable) and pneumatic actuator. If necessary tighten the fastening screws.

(if module is available) check electrical position indicator:

The electrical signals for indication "OPEN" and "CLOSED" can be compared with optical indication of the valve. Signal and indication must match.

If this fails check control system and/or position indicator.

If a valve cannot be actuated correctly as described above, even though it is properly connected, actuator and/or valve must be replaced.

7. Start-up

The actuator can only be started via the plant control after all tests described in the previous section 6.4 have been completed without objections. The instructions for valves specify whether and which additional steps are required for start-up.

The technical rating of the actuator for permanent operation can be found in section 6, table 1.

ATTENTION

Important for operation with short closing times: The wear inside the valve may be disproportionately high. With the installation of throttle valves in the supply line or in the discharge line for the control medium the travel time can be extended to a normal value.

ATTENTION

In any case the travel frequency must be limited to such an extend, that the temperature measured on the actuator housing does not exceed 80°C during continuous operation.

Installation, Operation & Maintenance

8. Troubleshooting

When rectifying a fault section 4: <Notes on Safety> must be strictly observed.

Note: In case of malfunctions in the valve: Follow the instructions for the valve.

Type of fault	Action	Remark
"Actuator does not respond to control signal"	"Check control pressure on actuator: The minimum pressure for the rating of the actuator is required. If the control pressure is sufficient, but the actuator does still not respond: Check whether the valve hard to move: For remedy refer to the instructions for the valve. If the valve is also free of faults: Check control and/or dismantle the actuator, see section 9.4."	Note 1: When working on electric modules strictly observe the warnings in section 4.3! Note 2: If a module needs replacement or spare parts: Always specify all data mentioned on the type plate of this module in your order.
Solenoid valve does not switch	"Check whether the magnetic coil has burned out. Check whether the coil was compatible with the control voltage. If the magnetic coil is OK: Observe the instructions for the solenoid valve."	
Valve switches too quickly	"Install a restrictor into the supply or discharge line on the solenoid valve."	
Valve is leaking	"If the leak is to be eliminated by changing the end position ""CLOSED"": Adjust the setscrew in the actuator, see section 9.5 of the detailed instructions."	
"Actuator consumes air in end position ""OPEN"" and ""CLOSED"""	"Check the solenoid valve and its mounting on the actuator. If there is no leakage on the solenoid valve: Dismantle the actuator and renew the seals inside the actuator, see section 9.4."	

9. Work on the Pneumatic Actuator

The manufacturer normally delivers XOMOX® pneumatic actuators,

- In the design that has been ordered (double- acting or with springs),
- In size and rating adapted to the valve,
- With the required accessories, if ordered,
- Adjusted and mounted to the valve – as standard positioned parallel to the pipeline.

If an actuator needs to be subsequently converted in exceptional cases, this may also be performed by the user. If the actuator needs to be dismantled for this purpose, this should generally be done in an appropriate workshop with experts for the assembly of high-quality function parts.

9.1 Mounting an Actuator to the Valve



ATTENTION

For better understanding of the following instructions you may also use the publications mentioned in section 1, Area of Application, under note 2.

XOMOX® valve actuators have an interface to the valve in accordance with ISO 5211 and a form-closed bore in the control shaft (4), which

- Either in form of a square socket acc. to ISO 5211 in the end positions of the actuator positioned 45° "on the tip",
- Or as square socket acc. to ISO 5211 parallel to the longitudinal axis of the housing.
- With some drive sizes the installation of a square insert may be necessary. The installation/dismantling takes place according to section 9.7.

The actuator ordered must match the valve. The valve must

- Have a fitting control spindle end and
- A matching fastening flange acc. to ISO 5211, this must be checked before the installation.

Please observe when mounting the actuator to the valve that

- The longitudinal axis of the actuator should normally be orientated parallel to the pipeline axis,
- The fastening screws match the standardized thread depth acc. to table 2 (see below). Screws too short or too long for the thread depth must not be used,
- The position indicator on the pneumatic drive matches the position of the valve. If a conversion is required, please refer to the next section 9.2.
- The piping system must be earthed to an appropriate extent by the installer.

Table 2: Connection measurements

Size	001	002	006	012	025	050	090
Thread depth [mm]	8	8	6,5/7,5/8	9	9	12	16/22
Square s =	9	9/11	11/14	14	14	17	17/22


Size	130	180	205	380	630	960	H15
Thread depth [mm]	16/18	18	20/25	20/25	25/32	25/32	25/32
Square s [mm]	22/27	27	27/36	27/36	36/46	46/55	55/75

Installation, Operation & Maintenance

⚠ ATTENTION

If the actuator has already been mounted by the supplier, the supplier is solely responsible for correct adjustment of the position indicator.

Fig. 6 Mounting an Actuator to the Valve

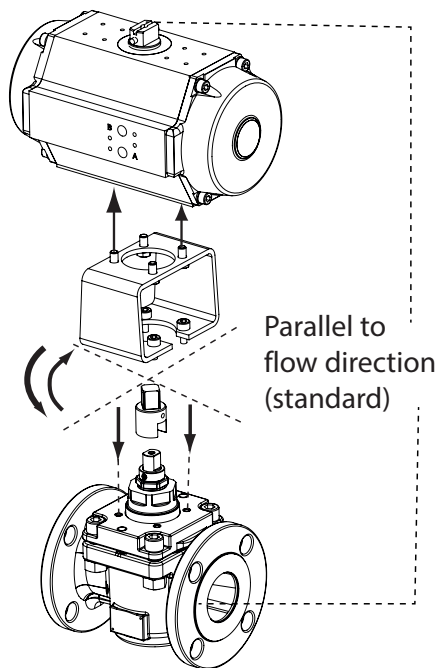

9.2 Conversion of Drive Shaft To Change the Position Indicator

If the position indicator is not correctly adjusted or the position of the actuator to the valve needs to be changed for 90° by the customer, the control shaft with its position indication must be turned by 90°.

⚠ ATTENTION

Be careful when removing the actuator from the valve installed in the pipeline: The actuator must only be removed after the pressure in the pipeline has been relieved.

- Disconnect all connections to the control, unscrew the fastening screws to the mounting flange and take the actuator off the valve, see Fig. 6 in previous section 9.1,
- Disassemble the actuator, as described in section
- 9.4, Disassembling an Actuator,
- Assemble the actuator shaft 90° offset, reassemble the actuator (not series 6).

⚠ ATTENTION

Be careful when working on actuators with spring reset: Dismantling and assembly should be performed under the supervision of a safety expert or by the manufacturer.

In XRP Upgrade Series, springs are encapsulated & pre-compressed. If spring capsule is damaged, do not try to repair the capsule. Replace the same from manufacturer.

Before mounting the actuator to the valve make sure that the position indicator is correctly adjusted, see Fig. 6 and section 9.1, Mounting an Actuator to the Valve.

9.3 Changing the Spring Force

⚠ ATTENTION

Danger of injury: Spring reset actuators contain compressed spiral springs.

⚠ ATTENTION

In order to prevent a risk of injury caused by unprofessional work the following steps must be performed with greatest care and only under the supervision of a safety expert.

⚠ ATTENTION

Since the spring / Spring Capsule reset is dimensioned by the manufacturer Crane Process Flow Technologies, any modifications to this dimensioning should also be coordinated with the manufacturer.


If the factory installed spring assembly in actuators with Spring / Spring Capsule reset is to be changed, both covers (2) must be opened.

Installation, Operation & Maintenance

Fig. 7 Mounting an Actuator to the Valve

Series 7 (sizes 001 - 006)
Series 5 (sizes 012 - H15)

(Sizes 960 and H15
have 6 screws)

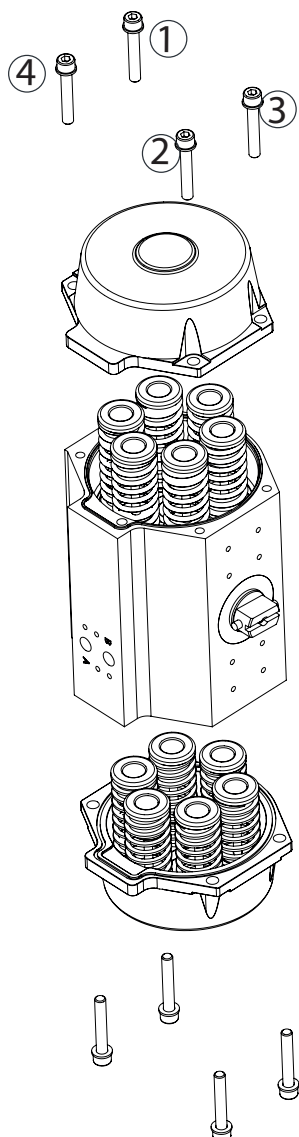

⚠ ATTENTION

Note 1: First read the following instructions to end before starting to disassemble!

⚠ ATTENTION

Open the actuator only outside the danger zone.

⚠ ATTENTION

Models 002 and 006 spring return actuators: Place actuator in a press before removing endcap bolts. The springs in these units are still compressed when the endcap bolts are disengaged from body.


⚠ ATTENTION

Be extremely careful while disassembling the end caps on actuators with spring reset. In XRP Upgrade Series, springs are encapsulated & pre-compressed. If spring capsule is damaged, do not try to repair the capsule. Replace the same from manufacturer. Use of impact wrenches not permitted.

The conversion should be performed in the following steps:

- Strictly depressurize the actuator beforehand, so that it travels to safety position. It is also mandatory to depressurize the valve,
- then mark the position of the actuator and remove it from the valve, disassemble all accessory modules (solenoid valve, position indicator and/or position controller),
- remove screws in the sequence 1-4 (Fig. 7) by each only 1 cm. That's important for an even load during the relaxation process of the endcap.
- Repeat step c) so often until screws are completely removed.


Fig. 8 Disassembling the end cap

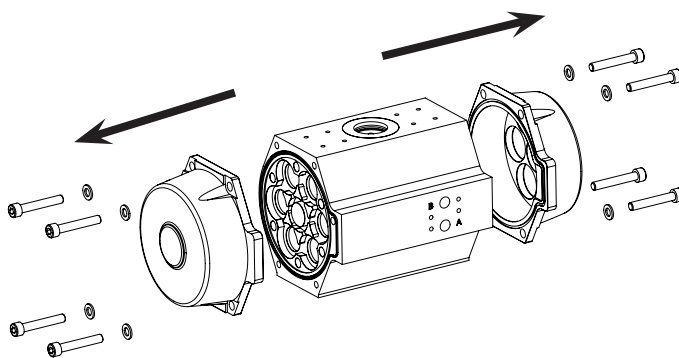

(Sizes 960 and H15 have 6 screws)

- Then loosen the first cover (2),
 - Before loosening the screws (18) it must be assured that the actuator is completely depressurized.
- Slacken the screws (18) crosswise and in pairs uniformly and in small steps in order to relieve the springs slowly, then change the spring assembly as shown in Fig. 9 and retighten the cover (2) in reverse order.

Installation, Operation & Maintenance

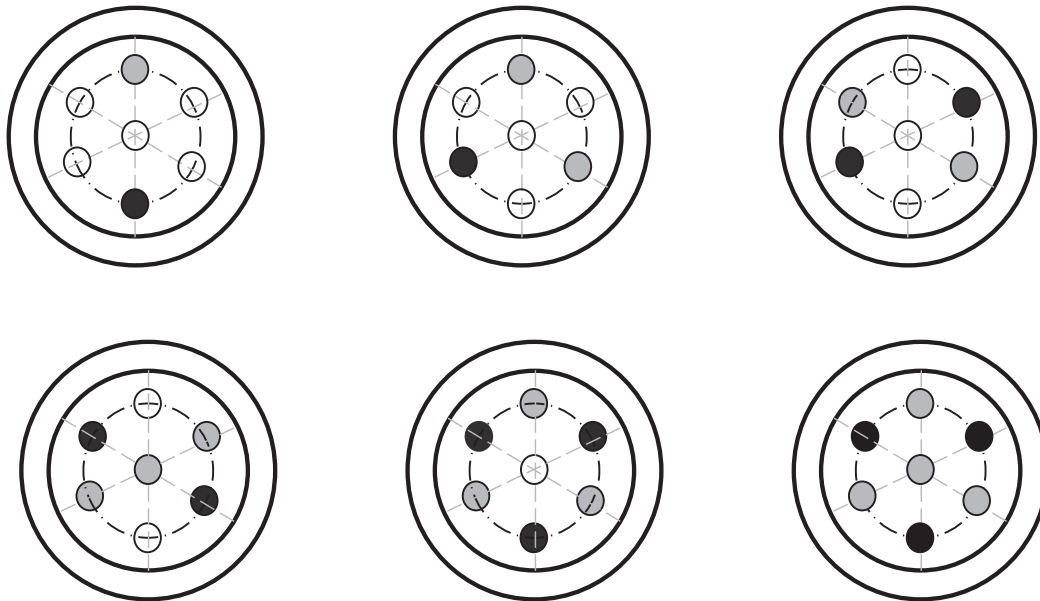


Without
Limit Stop /
Pulling Rod

- Spring anti-clockwise rotation
- Spring clockwise rotation
- Empty slot

Applicable for:

XOMOX XRP (Series 5 & Series 6)
XOMOX XRP Upgrade (Series 5)

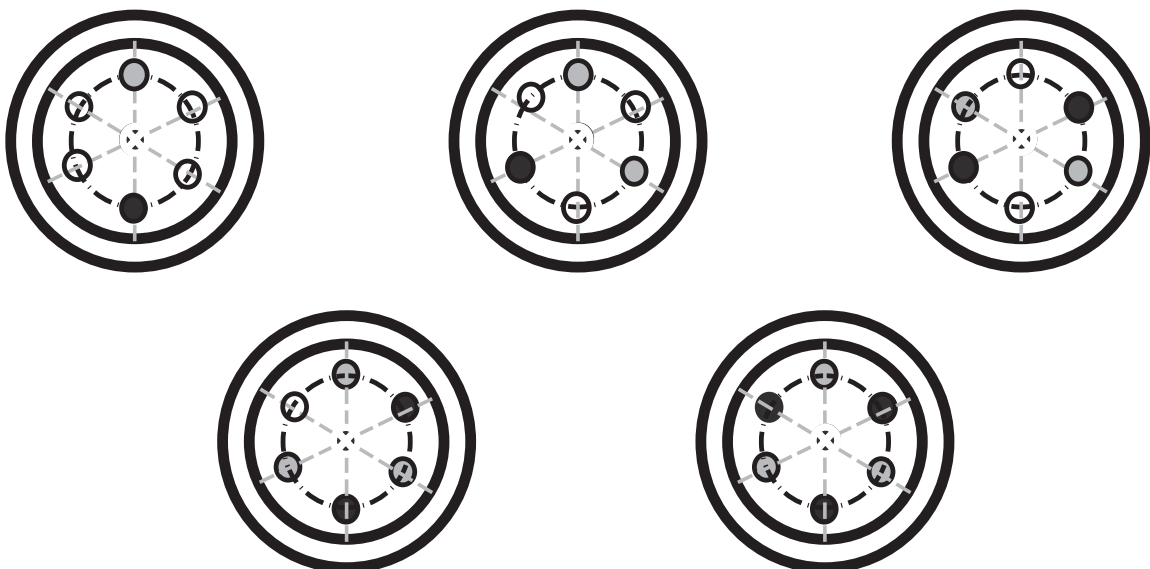

With
Limit Stop /
Pulling Rod

- Spring anti-clockwise rotation
- Spring clockwise rotation
- Empty slot

Applicable for:

XOMOX XRP Upgrade (Series 6)

Installation, Operation & Maintenance

- g) Place the cover (2) centrally on the spring pack and press it slightly down, so that the screws (18) reach into the tapped bores.

⚠ ATTENTION

The strength of the housing material requires the reuse of all screws (18) with original length, do not use any shorter screws! (Observe the tightening torques given on page 23)

- h) Then turn the actuator around and change the springs on the opposite site in the same way.
i) After this reassemble the electric modules (solenoid valve, position indicator and/or position controller).
j) Then mount the actuator back to the valve, as described in section 9.1 <Mounting...>.
k) Finally check the actuator with the control to find out whether the valve is correctly actuated and whether the position indication is correct.

9.4 Dismantling an Actuator

- In case of a defect remove and dismantle the actuator and replace the defective part. You must only use original spare parts from the manufacturer CRANE Process Flow Technologies.

Note: First read the following instructions to end before starting to disassemble!

⚠ ATTENTION

Be careful when working on spring reset actuators: These actuators contain compressed spiral springs. For dismantling these actuators section 9.3 must be additionally strictly observed in order to prevent the risk of injury.

In XRP Upgrade Series, springs are encapsulated & pre-compressed. If spring capsule is damaged, do not try to repair the capsule. Replace the same from manufacturer

- Close valves with double-acting actuators,
- Depressurize double-acting and spring reset actuators,
- If possible disassemble the actuator from the valve. This requires depressurizing of the valve (if this is not possible clarify the procedure with the locally responsible safety officer!),
- Then make a note of the currently indicated position of the position indicator on the actuator,
- Then mark the position of the actuator on the valve and separate the actuator from the valve,
- Then loosen screws (18) on covers (2) crosswise and uniformly and take off covers (2),
- Then turn the dihedron on shaft head (5) and push both pistons (3) out of the drive housing, until they are disengaged,
- Take both pistons (3) carefully out.

Both pistons (3) must be reassembled in correct position and

with the racks to the right and left of control shaft (4), as they have been taken out, as otherwise the sense of rotation of the actuator will be reversed! See also Fig. 4 (spring closing) and Fig. 5 (spring opening).

You should therefore make a note of the position of both racks on the pistons before pulling them out of the housing.

- Then disengage circlip (17) with a special pliers from inside, slide it up and push down Pos.(4) together with Pos.(7),
- Then check which parts are damaged and need to be replaced. All O-rings and slide belts should be replaced in any case. These are available from Crane Flow as a spare part set.

The actuator must be reassembled and mounted to the valve in reverse order.

Fig. 10 Pushing down the pistons

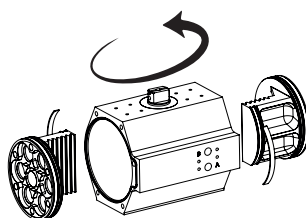


Fig. 11 Removing internal parts

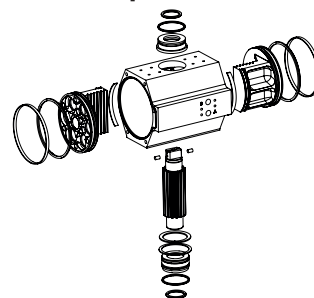


Fig. 12 Preparations for assembly


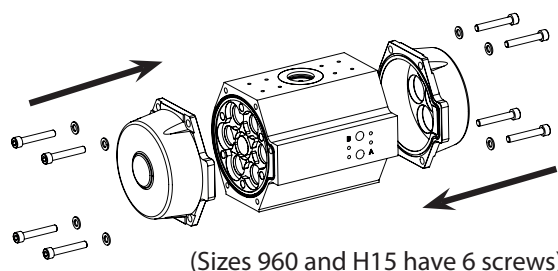


Fig. 13 Inserting the pistons

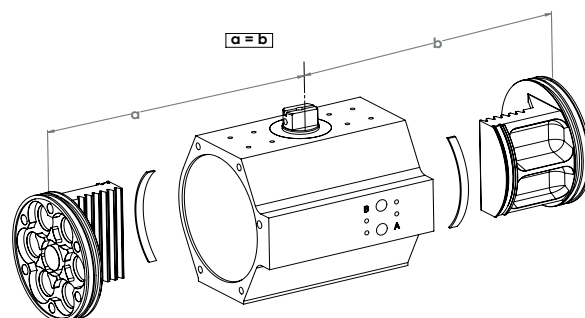

Installation, Operation & Maintenance

⚠ ATTENTION

Both pistons (3) must be reassembled in correct position and with the racks to the right and left of control shaft (4), as they have been taken out, as otherwise the sense of rotation of the actuator will be reversed! See also Fig. 14 (spring closing) and Fig. 16 (spring opening).

⚠ ATTENTION

For this purpose observe the positions of both pistons (3) noted before disassembly.

Note: Please observe Fig. 16 to 19 for the different types and sizes of actuators as guidance:

9.5 Setting the End Position on Series 6 Actuator with Limit & Travel Stop (Sizes 012 - 180)

Setting the End Position Limitation

On valves with actuators delivered from the factory the travel limitations, e.g. for butterfly valves, are normally adjusted in a way that the valve is leak tight in position "CLOSED" and has a travel of 90°. For e.g. ball valves the possibility of an exact adjustment to position "OPEN" may be requested. The following procedure describes how this final adjustment can be readjusted for actuators starting from size 012.

⚠ ATTENTION

All adjustment work must first be carried out with the unit disconnected from the compressed air supply. A test run with compressed air must only be carried out after this adjustment has been made. Only on actuators with resetting springs the setscrews should only be unloaded by means of compressed air.

Actuator size 012 - 180

Setscrew „A“ for position „OPEN“ is located on the right hand side of the actuator (see adjacent Fig.14). Setscrew for position „CLOSED“ is located on the left hand side. The total available adjustment range is 98°.


Setting to "normally OPEN" for function "double-acting" and "spring resetting":

- Pull of the protection cap and loosen the locking nut.
- Turn setscrew "A" by the hexagon socket in clockwise direction. This means "Reduction of travel in opening direction (94° to -4°)". Turning setscrew anti-clockwise means "Increase of travel in closing direction".
- After the adjustment retighten the locking nut and push the protective cap back on.

Setting to "adjusting closed position" for function "double-acting":

- Pull of the protection cap and loosen the locking nut.
- Turn setscrew "B" by the hexagon socket in clockwise direction. This means "Increase of travel in closing direction (-4° to 94°)". Turning the setscrew anti-clockwise means "Reduction of travel in opening direction".
- After the adjustment retighten the locking nut and push the protective cap back on.

Fig. 14

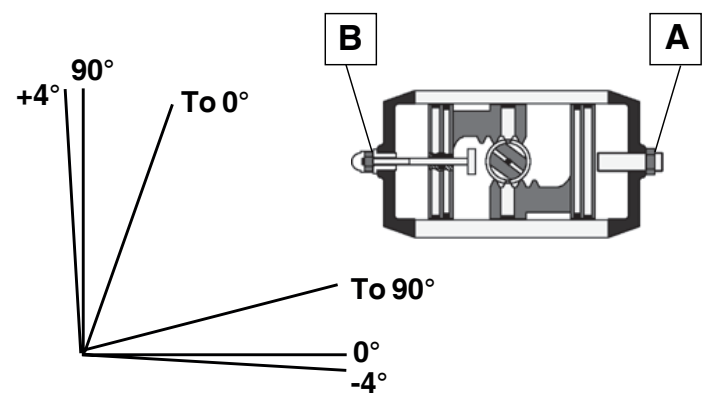

Actuator	A	Torque /Nm
		B
012	12	12
025	12	12
050	15	16
090	15	15
130	20	20
180	20	20

Installation, Operation & Maintenance

Setting to "normally CLOSED" for function "spring resetting":

• Here the same applies as described under "double-acting". However, setscrew "B" must not be adjusted anti-clockwise against the tensioned resetting springs, thus to avoid excessive strain and damage. The adjustment of this screw in anti-clockwise direction is considerably accommodated by a carefully dosed supply of compressed air through air inlet port "A" on the actuator. Only the amount of compressed air that is necessary to enable force-free turning of the setscrew shall be supplied.

Actuator sizes 001 - 006



Setting the end position is only possible for position "normally Open". Set screws acc. to "A" are on both sides of the actuator.

- Turn the setscrews "A" by the inner hexagon in clockwise direction to reduce the "travel in opening direction".
- Turning setscrews anti-clockwise to increase "the travel in closing direction".

9.6 Schematic Structure

Sizes 001 - H15 double-acting/spring closing

Parallel to pipeline Standard

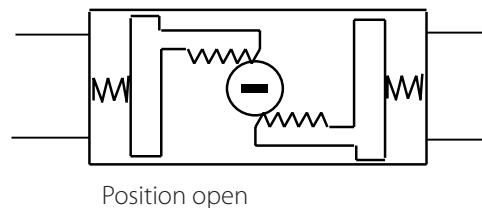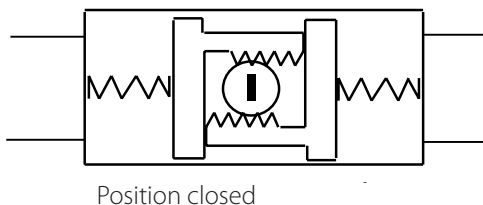

Transverse to pipeline Shaft turned by 90°




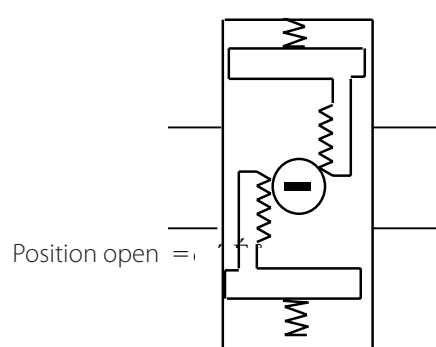


Fig. 15. Schematic of actuator double-acting and with closing spring (sizes 001 to H15)



Installation, Operation & Maintenance

Sizes 002 - H15, spring opening


Parallel to pipeline Piston Turned by 180°

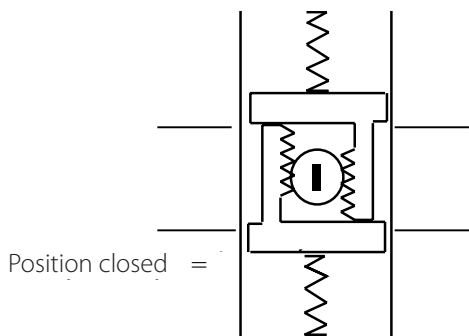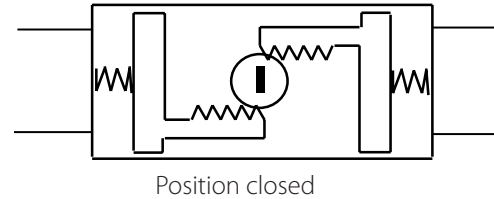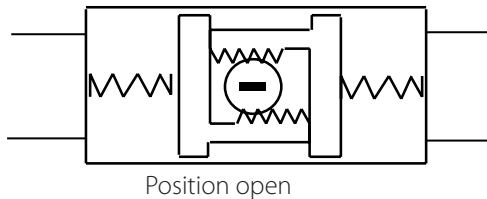


Transverse to pipeline Piston turned by 180° / shaft turned by 90°

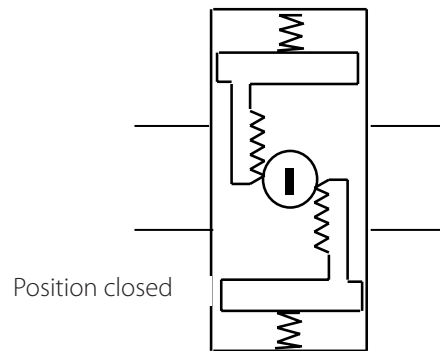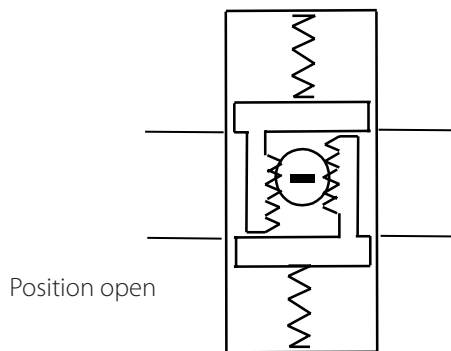

• Fig. 16 Schematic of actuator with opening spring (sizes 002 - H15)

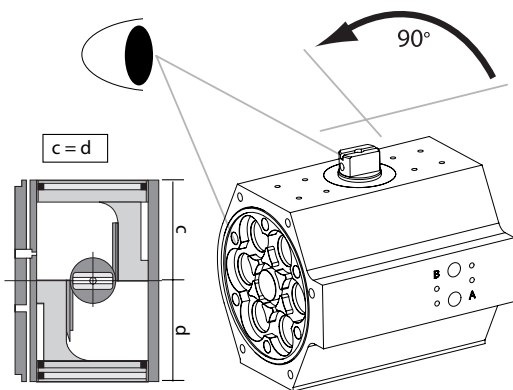

• Fig. 17 In "OPEN"-position pistons must be almost flush with the housing

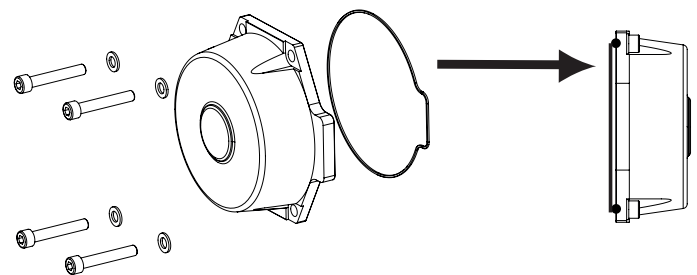

• Fig. 18 Assembly of cover with O-ring

Setting to "normally CLOSED" for function "spring resetting":

- When assembling the O-rings (14) it is advisable to lubricate these with grease on silicon or polyglycol basis before inserting them into their chamber in the cover. Do not use any mineral oil based greases or Vaseline. O-rings must not be "twisted" when being inserted into their seat.

⚠ ATTENTION

The strength of the housing material requires the reuse of all screws (18) with original length, do not use any shorter or longer screws!

Installation, Operation & Maintenance


9.7 Installation of the shaft inserts for drives 001, 002, and 006

XOMOX® Pneumatic Valve Actuators size 001 - 006 can be modified with diverse shaft inserts for different applications. This means the highest degree of flexibility. The installation/dismantling takes place according to the following layout:


A) Installation of the selected insert

Prior to installation of the insert, the drive is positioned according to Fig. 19. Positioning according to Fig. 20 is not permitted. The additional installation would cause damage to the drive!


With the installation of the selected insert it must therefore be ensured that it is not canted on the octagonal part of the shaft (see Fig. 21). Prior to joining, check whether positioning of the square at 0° or 45° is desired. Now drive the insert into the shaft with a light strike from a soft hammer (see Fig. 22). After completed assembly the square insert may not protrude.

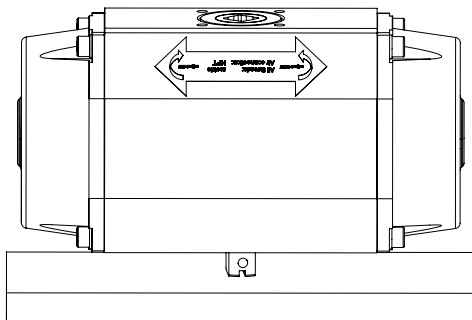


• Fig. 19

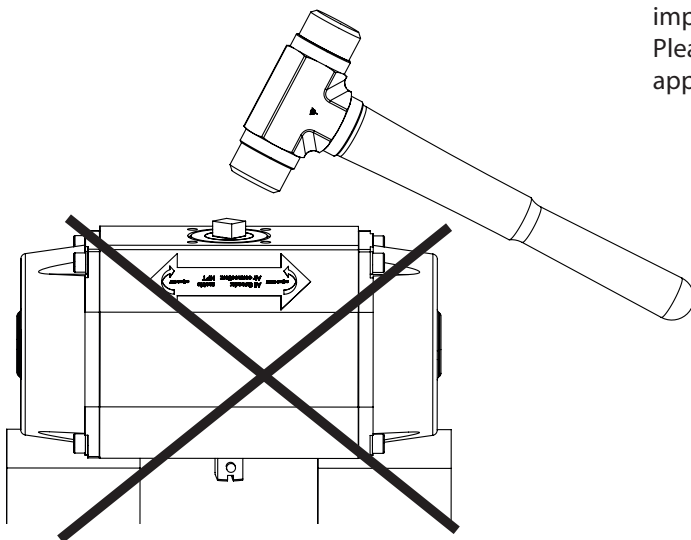

• Fig. 20

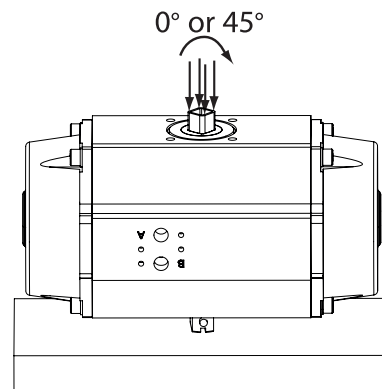


• Fig. 21

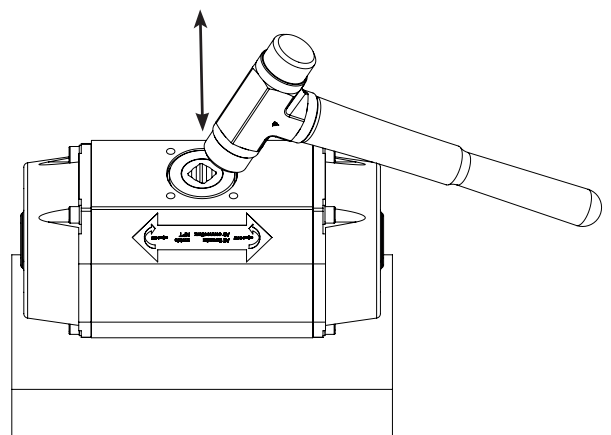

• Fig. 22

B) Dismantling the installed insert Depending on tolerances, this insert can be very firmly seated in the shaft. It is important with the dismantling that the insert is not canted. Please ensure uniform extraction! We recommend using an appropriate extraction tool (see Fig. 23).

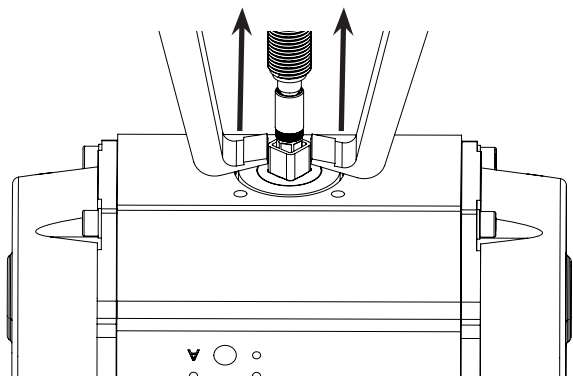

• Fig. 23

Installation, Operation & Maintenance

10. Maintenance

XOMOX® pneumatic actuators of series X & XU normally do not require any maintenance.

We recommend to replace O-rings and sliding belts after 500.000 switching cycles.

It is quite adequate to check periodically that no control medium leaks out. In events of emergency section 8. "Troubleshooting" must be observed.

Table 1 in section 6 <Installation... into the pipeline> shows the expected lifetime under the specified rating conditions.

⚠ ATTENTION

Danger, before working with the actuator. The Actuator must be moved from possible ATEX area to work area. No work on the Actuator in the ATEX areal.

⚠ ATTENTION

Actuators for use in explosive hazard areas must always be kept clean of dust deposits.

The Following is generally valid :The Actuator should preferably be cleaned mechanically instead of using chemical means.

⚠ ATTENTION

In XRP Upgrade Series, springs are encapsulated & pre-compressed. If spring capsule is damaged, do not try to repair the capsule. Replace the same from manufacturer

11. Spare Parts

Spare parts sets for the actuators are available from the manufacturers stock and must be ordered with all details specified on the type plate.

⚠ ATTENTION

All parts made of elastomers are organic materials, which must be stored in an environment as cool, dry and dark as possible. Due to aging these parts should not be stored for longer than 2-3 years.

Spare parts for the valve are specified in the instructions contained in the complete delivery.

12. Further Information

Can be obtained from your nearest office of CRANE® Process Flow Technologies or from our head office.

13. Mini Drives

Series 7 (sizes 001 - 006)

General

XOMOX® Mini actuators differ from the bigger actuators in a few details. The following description explains these differences. All other points apply also for Mini actuators.

XOMOX® Mini actuators have a standardized interface acc to ISO 5211.

The control shaft is provided with an octagon to plug on a socket

- Either in form of a square socket acc. to ISO 5211 in the end
- positions of the actuator positioned 45°,
- Or as square socket at 0° in end position
- Or, if demanded by the customer, as diehedron or another shape

Conversion of Drive Shaft to Change the Position Indicator

The procedure is as described under 9.2, however, it must be assured that the control shaft is not displaced axially in the housing. This is possible, because the shaft is not retained by a circlip, but the pistons are positively connected with the shaft and the shaft will float freely in the housing once the pistons have been removed.

Changing the Spring Force

Spring resetting Mini actuators of sizes 002 and 006 are equipped with max. 4 pieces of centrally arranged springs.

⚠ ATTENTION

The springs are pre-loaded can be relieved by means of the cover fastening screws.

The cover plate must be held in place to open the actuator. This can be accomplished by using a screw clamp, in a vice or by using longer screws.


Also here the notes given under 9.4 must be additionally observed.

Series 7

Concentric springs (sizes 001 - 006)


In contrast to sizes 012 - H15 the coding of springs (digit 10 in code) does not correspond with the number of springs. The coding is made in accordance with the following list:

10. digit	Outer spring	Inner spring
2	0	1
4	0	2
6	1	1
8	2	0
10	2	1
12	2	2

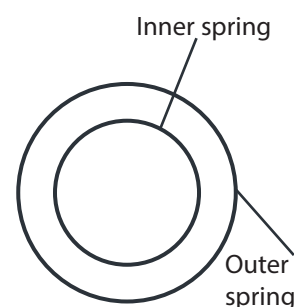

Installation, Operation & Maintenance

14. Exploded View

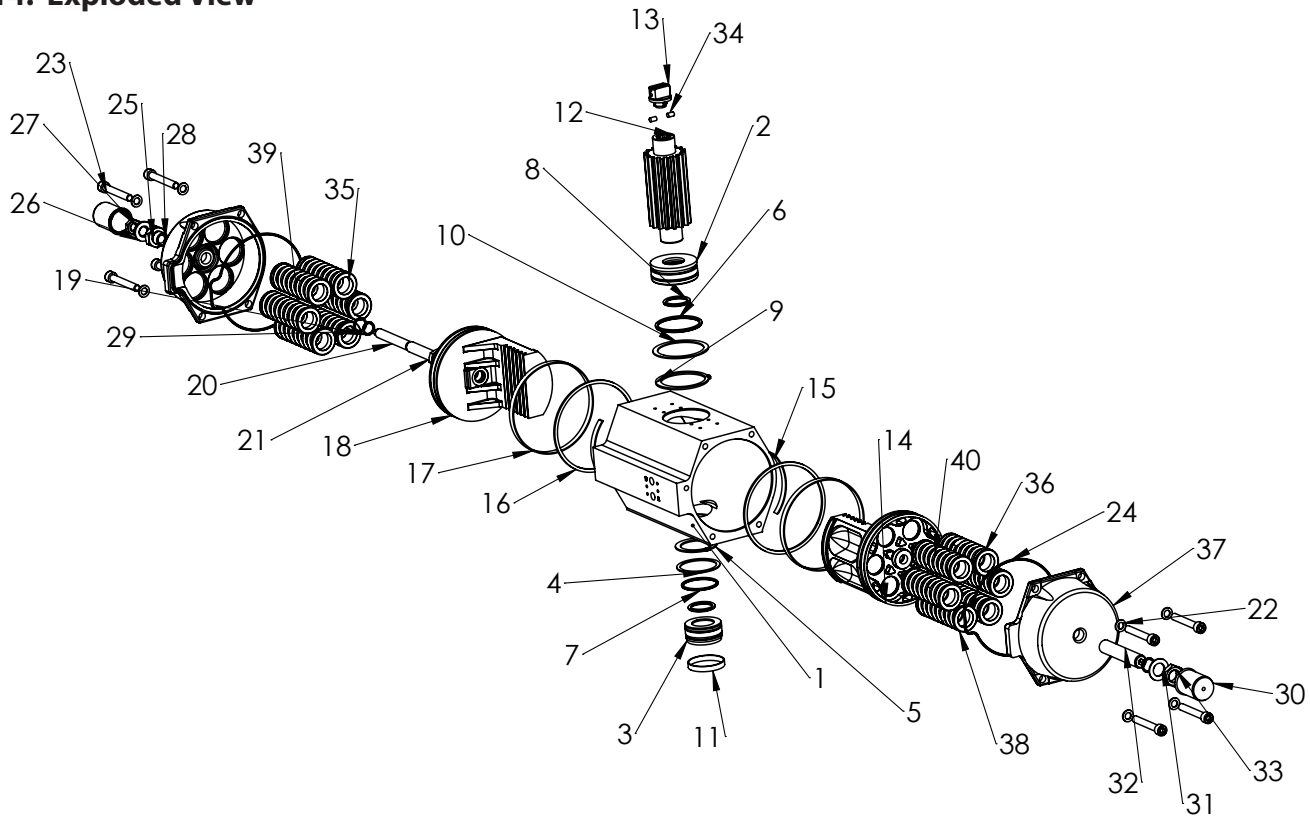

Pos	Qty	Description	Material
1	1	Body	Anodized Aluminum
2	1	Bearing - Top	POM
3	1	Bearing - Bottom	POM
4	1	Slip Ring	POM
5	1	Circlip	Spring Steel
6	1	O-Ring	NBR
7	1	O-Ring	NBR
8	2	O-Ring - Shaft	NBR
9	1	Circlip	Spring Steel
10	1	Slip Ring	POM
11	1	Centering Ring	Aluminum
12	1	Shaft	Aluminum / Anodized
13	1	Shaft head	Aluminum / Anodized
14	1	Piston	Aluminum
15	2	Piston Guiding Tape	PTFE, 25% Carbon Filled
16	2	O-Ring - Piston	NBR
17	2	Piston Guiding Tape	PTFE, 25% Carbon Filled
18	1	Piston	Aluminum
19	2	O-Ring	NBR
20	1	Pull Rod	Nickel Plated Steel

Pos	Qty	Description	Material
21	1	Pull Rod Nut	Stainless Steel
22	8	Washer	Stainless Steel
23	8	End Cap Screws	Stainless Steel
24	2	O-Ring	NBR
25	1	Threaded Bushing	Nickel Plated Steel
26	1	Washer	POM
27	1	Flat Hexagon Nut	Stainless Steel
28	1	O-Ring	NBR
29	2	O-Ring	NBR
30	2	Cap	Polyethelene
31	2	Washer	POM
32	1	End Stop	Nickel Plated Steel
33	1	Flat Hexagon Nut	Stainless Steel
34	2	Indicator	Polyamid
35	6	Springs	CrSi Alloy With Coating
36	6	Springs	CrSi Alloy With Coating
37	2	Spring Cover	Aluminum Painted
38	24	Spring Cup*	Nylon / Anodized Aluminum
39	12	Rivet	Steel With Coating
40	12	Washer	Stainless Steel

* Actuator size 012 to 180 are available in both XRP & XRP Upgrade

Installation, Operation & Maintenance

15. Screw Tightening Torques

Tightening torques

Actuator	Cover Plate Screws	Screw Used	Adjusted Stage	Tightening Torque	Counter Nut End Position	Tightening Torque
001	M 4 x 10 mm	-/-	-/-	2 - 2,5 Nm	M 5	2 Nm
002	M 4 x 20 mm	-/-	-/-	2 - 2,5 Nm	M 5	2 Nm
006	M 5 x 20 mm	-/-	-/-	2,5 - 3 Nm	M 6	4 Nm
012	M 6 x 40 mm	1	2	9 Nm	M 12 x 1	12 Nm
025	M 6 x 40 mm	1	2	9 Nm	M 16 x 1,5	12 Nm
050	M 8 x 50 mm	1	4	18 Nm	M 18 x 1,5	15 Nm
090	M 10 x 70 mm	2	9	30 Nm	M 20 x 1,5	15 Nm
130 / 180	M 10 x 80 mm	2	9	30 Nm	M 24 x 2	20 Nm
205 / 380	M 12 x 40 mm	2	9	35 Nm	-/-	-/-
205	M 12 x 80 mm	2	9	35 Nm	-/-	-/-
380	M 12 x 110 mm	2	9	35 Nm	-/-	-/-
630 - H15	M 16 x 50 mm	3	8	110 Nm	-/-	-/-
630 / 960	M 16 x 110 mm	3	8	110 Nm	-/-	-/-
H15	M 16 x 140 mm	3	8	110 Nm	-/-	-/-

16. Waste disposal after expiry of the expected service life

The metal components used, such as aluminium, grey cast iron, high-grade steel and steel can be returned for recycling.

Plastic and rubber parts cannot be reused and must be disposed of as residual waste & Disposal shall be done as per state / local regulations.



CRANE CHEMPHARMA & ENERGY

Xomox International GmbH & Co.OHG
Von-Behring-Straße 15
88131 Lindau (Bodensee)
Germany
Tel.: +49 8382 702-0

Xomox Corp.
4444 Cooper Road,
Cincinnati, OH 45242
USA
Tel.: (513) 745-6000

Crane Company, and its subsidiaries cannot accept responsibility for possible errors in catalogues, brochures, other printed materials, and website information. Crane Company reserves the right to alter its products without notice, including products already on order provided that such alteration can be made without changes being necessary in specifications already agreed. All trademarks in this material are the property of the Crane Company or its subsidiaries. The Crane and Crane brands logotype (ALOYCO®, BAUM®, CENTER LINE®, CRANE®, CRYOWORKS®, DEPA®& ELRO®, DOPAK®, DUO-CHEK®, FLOWSEAL®, GYROLOK®, GO REGULATOR®, HOKE®, JENKINS®, KROMBACH®, NOZ-CHEK®, PACIFIC®, RESISTOFLEX®, XOMOX®, SAUNDERS®, STOCKHAM®, TECHNIFAB®, TEXAS SAMPLING®, WESTLOCK CONTROLS®, WTA®, and XOMOX®) are registered trademarks of Crane Company. All rights reserved.
