

brands you trust.

Manually Operated Rubber Diaphragms Installation & Maintenance Instructions

Saunders[®] HC4 Diaphragm Valves

Index

Installation & Operation.....Page 3-6
Torque Spec Table.....Page 7

 CAUTION

READ INSTRUCTIONS BEFORE INSTALLATION or valve service. Failure to follow instructions could result in death or serious injury. If there is any question, contact the factory at U.S: 936-588-8360 or UK: +44 1633 486666


 WARNING

Proper installation plays an important role in valve performance. Installation must be performed by qualified technicians only. Customer assumes all responsibility for valve performance on valves installed in the field by non-Crane ChemPharma & Energy, Saunders personnel. Improper installation will result in damage to the valve.

Installation & Operation

IMPORTANT:

Ensure that the line pressure has been removed and the system is drained and flushed.
Please ensure that you have the correct tools and safety equipment to disassemble valves correctly and ensure you follow recommended safe working practices.

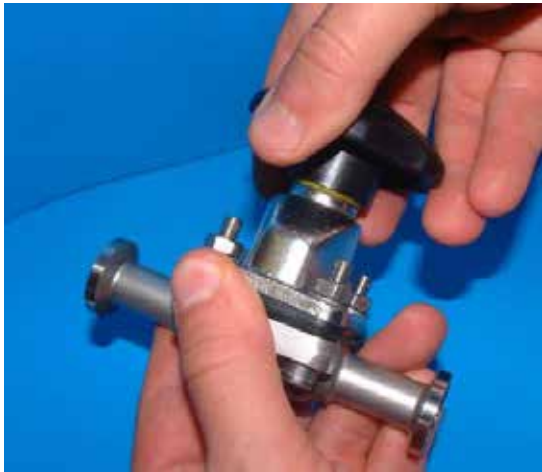

1. Position the valve in the fully-open position by turning the handwheel anti-clockwise.



Installation & Operation

2. Start to loosen the fastenings.

IMPORTANT:

Do not remove the nuts completely, as there may be pressure remaining in the system. Wait for any excess pressure to finish venting.



3. Remove the fastenings.




4. Remove manual bonnet assembly.




Installation & Operation

5. Inspect the valve body sealing surface for damage.

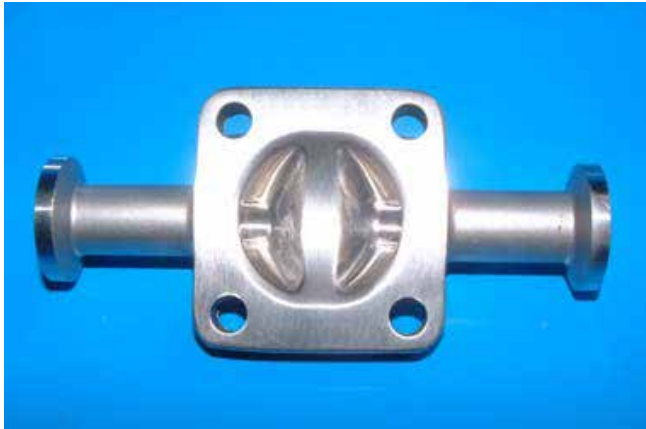

6. Remove diaphragm from bonnet assembly by closing and turning diaphragm anti-clockwise.

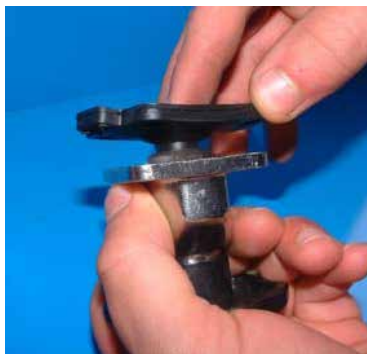

Attach new diaphragm:

7. Close the bonnet assembly by turning the hand-wheel clockwise. This will expose the compressor to allow easier diaphragm engagement.

8. Engage diaphragm into the compressor by turning clockwise.

9. Fully open the bonnet assembly.




Installation & Operation

10. Attach the bonnet assembly to the body. Insert the retaining fastenings and hand tighten as shown in Figure 1.

Use diagonally opposing technique to tighten fastenings at all times.



Figure 1

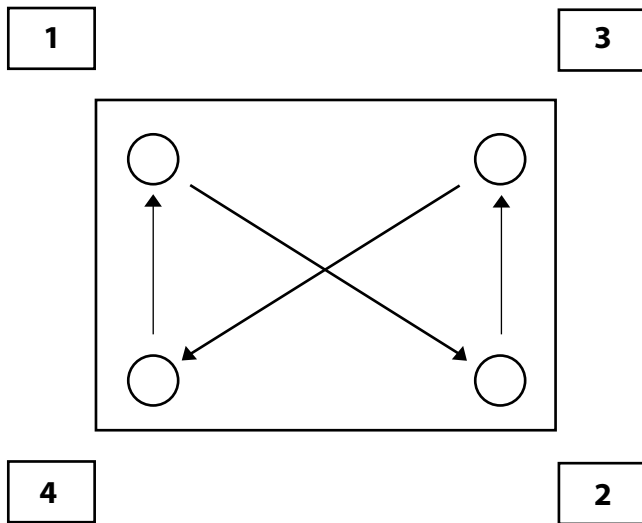

11. Place valve in a fully-closed position and tighten fastenings to $\frac{3}{4}$ of full torque (as per torque spec sheet).



12. Before final tightening, position valve in a fully open position.



Torque Spec Table

13. Tighten all fastenings to the specified torque setting (See torque spec tables), as per Figure 1.



Valve Size (DN)	Maximum Torque (Nm)
8	3
15	6.6
20	6.6
25	8
40	17
50	33
65	47
80	67

IMPORTANT:

14. Re-tighten fastenings to the maximum torque after 24 hours or first heat cycle, ideally the retightening operation should be carried out with the valve in the open position and the valve temperature at 40°C or below.

CRANE ChemPharma & Energy

CRANE ChemPharma & Energy
9860 Johnson Road
Montgomery, Texas USA 77316
Tel: +1 936 588 8360
Fax: +1 936 588 8302

CRANE Process Flow Technologies Ltd.
Grange Rd,
Cwmbran, Gwent NP44 3XX
Tel: +44 1633 486666
Fax: +44 1633 486777

www.cranecpe.com



brands you trust.



COMPAC-NOZ[®]



DEPA[®]

ELRO[®]

DUO-CHEK[®]



NOZ-CHEK[®]



RESISTOFLEX[®]



STOCKHAM[®]



UNI-CHEK[®]

w.ta.[®]

XOMOX[®]

CPE-SAUNDERS-ACTUATED PTFE-IOM-EN-L15-6-30-2014

Crane Co., and its subsidiaries cannot accept responsibility for possible errors in catalogues, brochures, other printed materials, and website information. Crane Co. reserves the right to alter its products without notice, including products already on order provided that such alteration can be made without changes being necessary in specifications already agreed unless otherwise indicated. All trademarks in this material are property of the Crane Co. or its subsidiaries. The Crane and Crane brands logotype (DEPA[®], ELRO[®], Krombach[®], PSI[®], Resistoflex[®], ResistoPure[™], Revo[®], Saunders[®], and XOMOX[®]) are registered trademarks of Crane Co. or its subsidiaries. All rights reserved.